USER MANUAL

SYTECH

When technology turns to art

ABYSS

SMARTPHONE

LEGAL INFORMATION

Copyright © 2013 SYTECH

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of SYTECH

SYTECH reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Some of the contents in this manual may differ from your phone depending on the software of the device or your service provider.

WELCOME

Welcome to Sytech! Thank you for purchasing the new Smart Phone ABYSS by SYTECH. Please read this manual carefully before operating your product and pay close attention to the precautions which are mentioned below. Store this user manual in a safe place for future reference.

CONTENTS

FOR YOUR SAFETY 7
General Safety 7
Distraction 8
Driving 8
Operating Machinery 8
Product Handling 8
General Statement on Handling and Use 8
Small Children 10
Demagnetization 10
Electrostatic Discharge (ESD) 10
Antenna 10
Normal Use Position 10
Air Bags 10
Seizures/ Blackouts 11
Repetitive Motion Injuries 11
Emergency Calls 11
Loud Noise 11
Phone Heating 12
Electrical Safety 12
Accessories 12
Connection to a Car 12
Faulty and Damaged Products 12
Interference 13
General Statement on Interface 13

Pacemakers 13
Hearing Aids 13
Medical Devices 13
Hospitals 14
Aircraft 14
Interference in Cars 14
Explosive Environments 14
Petrol Stations and Explosive Atmospheres 14
Blasting Caps and Areas 15
GETTING STARTED 16
Keys Explained 17
Starting up 18
Installing the SIM/SD Card and Battery 18
Removing the Battery and SIM/SD Card 20
Charging the Battery 20
Switching to Sleep Mode 23
Waking Up Your Phone 23
Getting Around Your Phone 24
Touch Control 24
Home Screen 24
Status and Notification Icons 28
Using the Notification Panel 29
PHONE CALLS 30
Calling from the Phone 30
Calling from Your Contacts 31

Calling from a Text Message 33
Receiving Calls 33
Answering a call 33
Muting the ringtone during an incoming call 34
Muting the microphone during a call 34
Turning the Speakerphone On/Off 34
Ending a Call 35
CONTACTS 35
Creating a Contact 35
Searching for a Contact 35
MESSAGING 36
Sending an Message 36
Message Settings 37
Touch Screen Input Settings 37
CONNECTING TO THE INTERNET 38
Turning On Wi-Fi 38
Connecting to a Wi-Fi Network 39
USB tethering & portable hotspot 41
Enabling USB tethering 41
Disabling USB tethering 41
Enabling the Wi-Fi Hotspot 42
BROWSING THE INTERNET 43
Browsing Options 44
Using Bookmarks 44
Editing a Bookmark 45

Deleting a Bookmark 45
BLUETOOTH 45
MULTIMEDIA 48
Taking Pictures with Your Camera 48
Listening to Your FM Radio 48
Playing Your Music 49
Opening Your Gallery 50
Playing Your Videos 50
Creating Voice Memos 50
PHONE SETTINGS 51
Setting Date and Time 51
Display Settings 51
Audio Profiles Settings 52
Language Settings 52
Switching Network Modes 53
Switching Networks 53
Security Settings 54
Disabling the Screen Unlock Security. 56
Protecting Your SIM Card with a PIN 56
Managing Your Device Memory 57
Privacy: Reset to Factory Settings 58
Applications 58
Installing an Application 58
Removing an Application 59
Moving an Application 59

Managing Other Settings 59
Text-to-speech Output 59
Accessibility 60
OTHER APPLICATIONS 60
Clock 60
Calculator 60
SPECIFICATIONS 61
DECLARATION OF CONFORMITY 62

FOR YOUR SAFETY

General Safety

	Don’t make or receive handheld calls while driving. And never text while driving.		Don’t use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don’t dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don’t take your phone apart.

	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don’t rely on your phone for emergency communications.		

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety

measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- The phone's normal operating temperature is -20℃ ~ 60℃ .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card’s metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the

operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a ‘flight mode’, this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

GETTING STARTED

Package contents

Before you use your SYTECH ABYSS for the first time; make sure all the contents mentioned below are included. If any of the below is missing, please go back to where the phone was purchased from.

Overview

Keys Explained

Key	Function
Power Key	• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off. • Press to switch your phone to Sleep mode. • Press to wake up your phone.
Home Key	• Press to return to the Home Screen from any application or screen. • Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

“Menu Key” - Bottom Left Key on the unit

“Home Key” - Bottom Centre Key on the unit

“Back Key” - Bottom Right Key on the unit

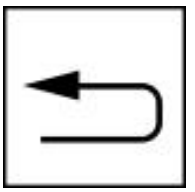

Starting up

Installing the SIM/SD Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card. Make sure the phone is turned off and it is not connected to a computer or external device before installing the SIM/SD card and battery.

1. Remove the back cover.

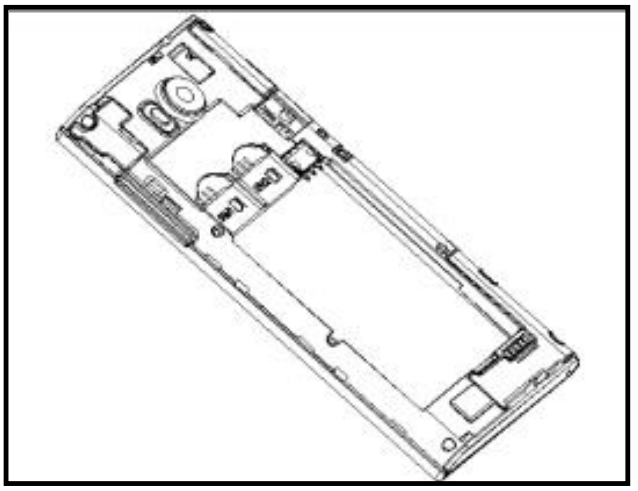

2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

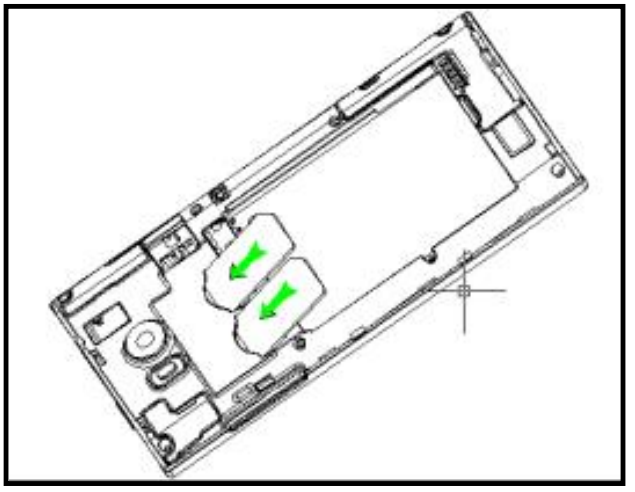

3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.

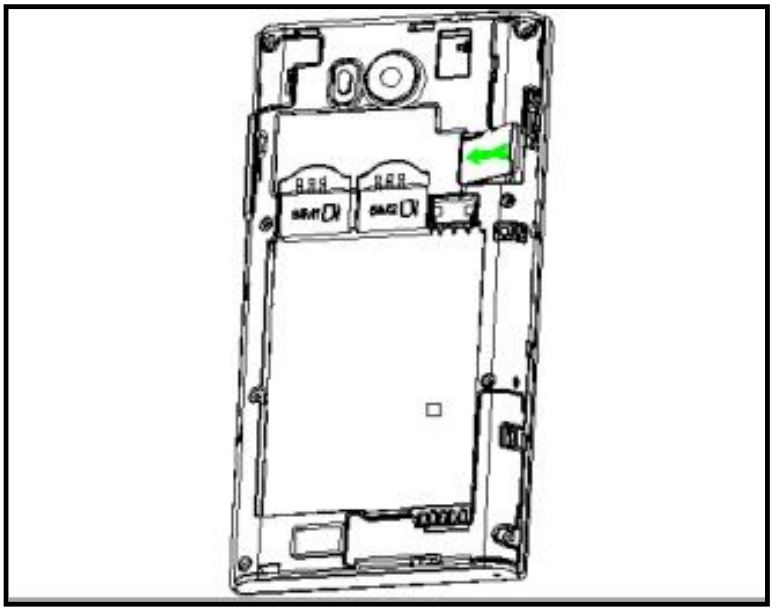

4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

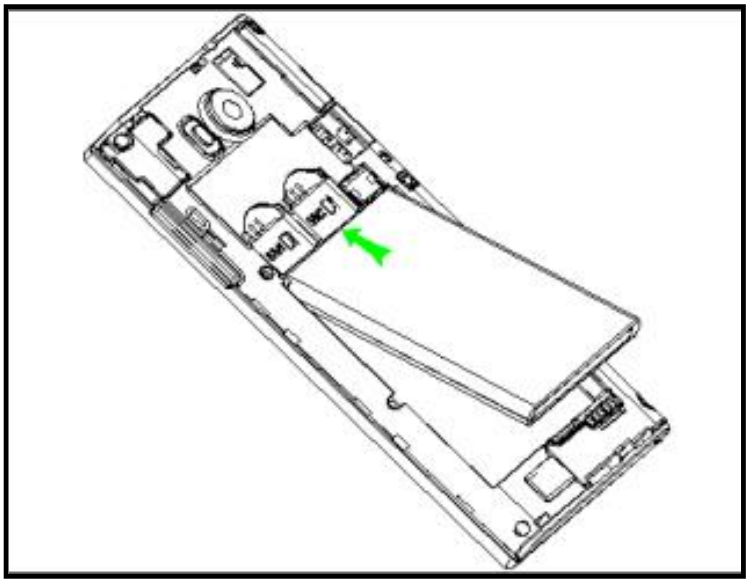

5. Press the cover gently back into place until you hear a click.

Removing the Battery and SIM/SD Card

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out.
4. Slide the SIM card out.
5. Slide the SD card out.

Charging the Battery

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

Sytech recommends you to charge the battery completely before the first use. Batteries usually last longer when they are charged up to a 100% before using.

Do not remove the battery while the smartphone is being charged.

Battery Maintenance

Even though the battery life deteriorates over time, there are certain things which can be done in order to prolong the battery life.

- Make sure to keep the battery in use. If it is left idle for too long it might not work properly.
- Avoid using the phone while it is being charged.
- Charge the battery on a regular basis
- Make sure the battery is away from all heat sources.
- If the battery fails, or the phone only works when the adaptor is plugged in, contact your local dealer to have it fixed.

Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold the **Power Key** to switch on your phone.
- To switch it off, hold the **Power Key** to get the phone options. Select **Power off (1)**, and then confirm by pressing **OK**.

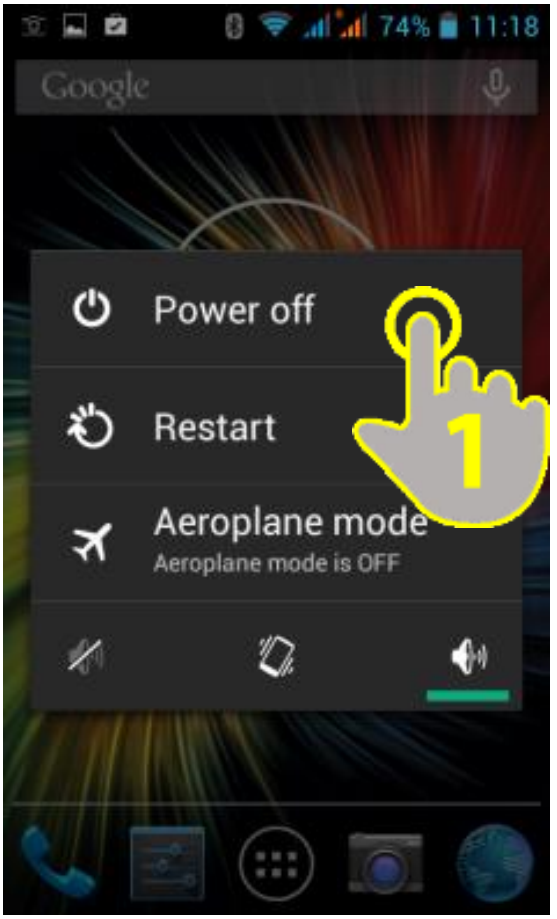

Setting Up Your Phone for the First Time

When you turn on your phone for the first time after you have purchased it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you will need to adjust a few settings before using it properly.

Once the SIM cards have been installed properly, and the battery has been placed in the correct position, you may switch on the phone by pressing the power on key for a few seconds. Once the display turns on and the home screen is loaded, you will be prompted to insert the PIN codes of both the SIM cards. You may change the settings of this through the menu.

The mobile phone locks itself automatically when it is left idle for a prolonged period of time. In order to unblock it, swipe the lock to the right towards the “unlock” icon. Tap the **Menu Key** and then select **System settings > Display** to change the settings of the lock screen.

The default language of the phone is set to Spanish. Tap the **Menu Key** in the standby mode, then select **System settings > Language & input > Language** to change the language you want to use, if needed.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can enter into the sleep mode pressing the **Power Key** once.

Waking Up Your Phone

1. Press **Power Key** to activate your screen display once again
2. Tap the icon, and drag it to the right of the screen towards the “unlock” icon.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you’ll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

> ***NOTE**: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side.*
> *Not all screens are viewable in landscape.*

Home Screen

In the Home screen, you can set your own wallpaper, add widgets or application shortcuts which you would like to have, or remove them as you wish.

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right and you will see the screen move.

Choosing Your Wallpaper

1. Press the **Home Key** to return to the Home Screen.
2. Tap the **Menu Key** and select **Wallpaper (1)**, or simply press and hold anywhere on the home screen and a shortcut to the wallpaper option opens up.

3. Tap **Gallery**, **Live Wallpapers**, **Video Wallpaper**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.

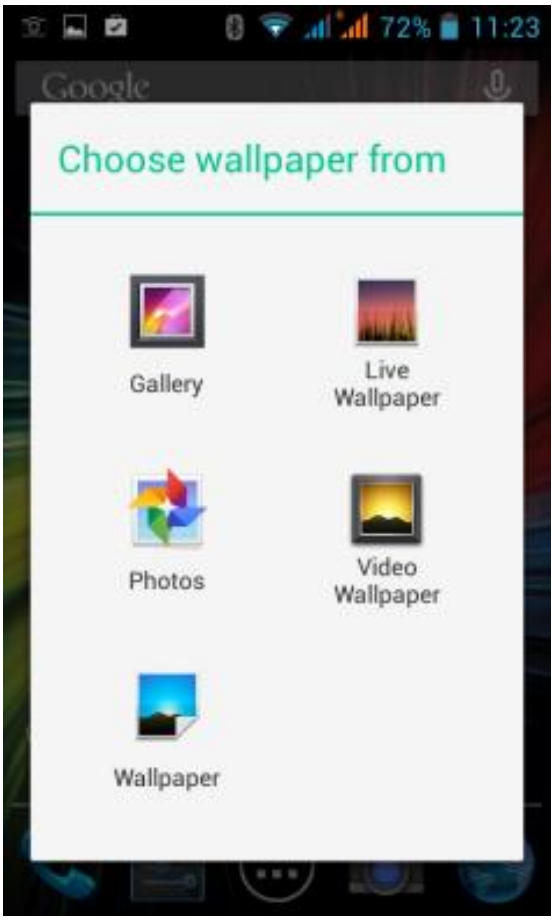

4. Tap **Set wallpaper** and the selected item will now be established as your wallpaper.

Adding Items to Your Home Screen

1. Press the **Home Key > tap** to enter the Application Program Interface
2. In the list of applications, touch and hold the icon until the

main screen appears **(1),** move the application icon to the desired position and then release your finger **(2).** The icon will now be on your home screen so you can access it easily.

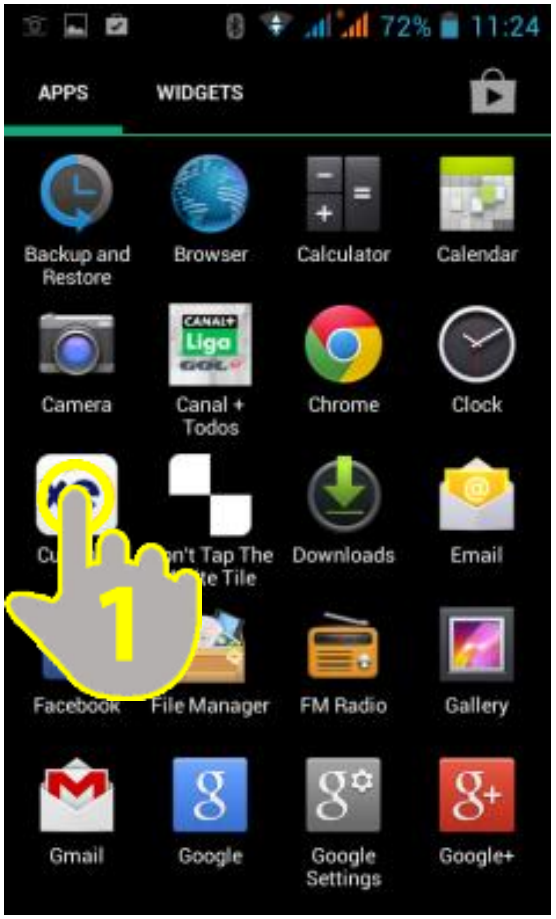

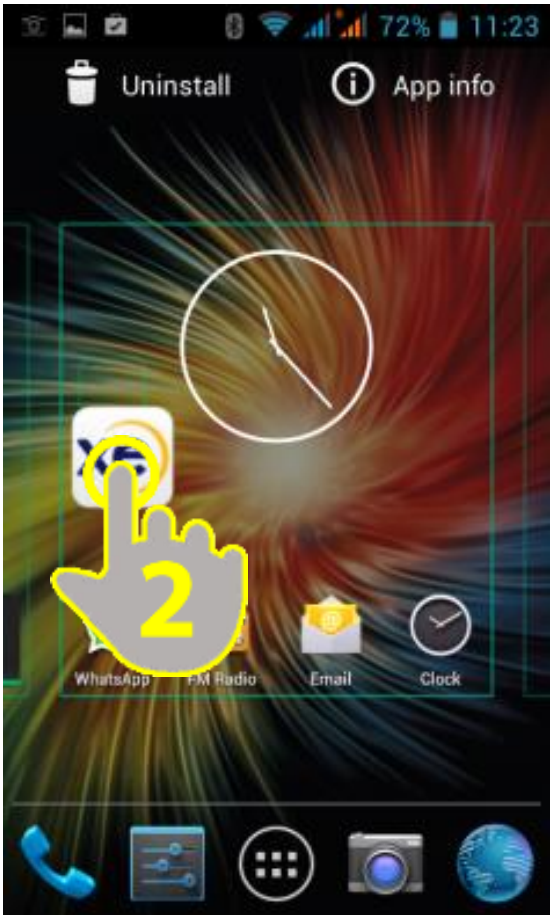

Removing Items from Your Home Screen

1. Press the **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the remove icon appears on the top of the screen. **(1)**
3. Drag the item to the remove icon and release your finger when the item turns red. **(2)** The item has now been deleted from the home screen menu.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength
	Battery charge		New message
	Meeting mode		Wi-Fi network

	Alarm set		Earphone insert
	Silent mode		Signal searching
	Bluetooth icon		USB debugging connected
	Data Conn off		New Wi-Fi network detected

Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messages and so on. Tap to open the shortcuts panel from notification panel. To hide the panel, tap on the lower edge of the panel and drag up. To access the shortcuts panel directly from the home screen, use two fingers and drag the screen from up to down and you will see many options which you can activate and/or deactivate.

Open/Close Recently-Used Applications

1. Hold the **Home key** from any screen. The phone will display icons of applications you used recently.

2. Tap the application you want to open.

3. To close a recently used application, simple slide the icon to the right.

PHONE CALLS

Making Calls

There are many ways to make a call with your phone.

Calling from the Phone

1. Press **Home key >** tap **> Phone** or tap on the Home Screen.
2. Enter the phone number using the on-screen keypad **(1).** Tap to delete wrong digits.
3. Tap the dial icon **(2)** and choose from which SIM card you wish to make the call. **(3)**

TIPS: To make international calls, hold to enter the "+".

***NOTE**: Go into the SIM management application to manage the SIM cards. You may establish the default SIM car or you may activate the option of "Always Ask". This option will always prompt you from which SIM you wish to dial a number.*

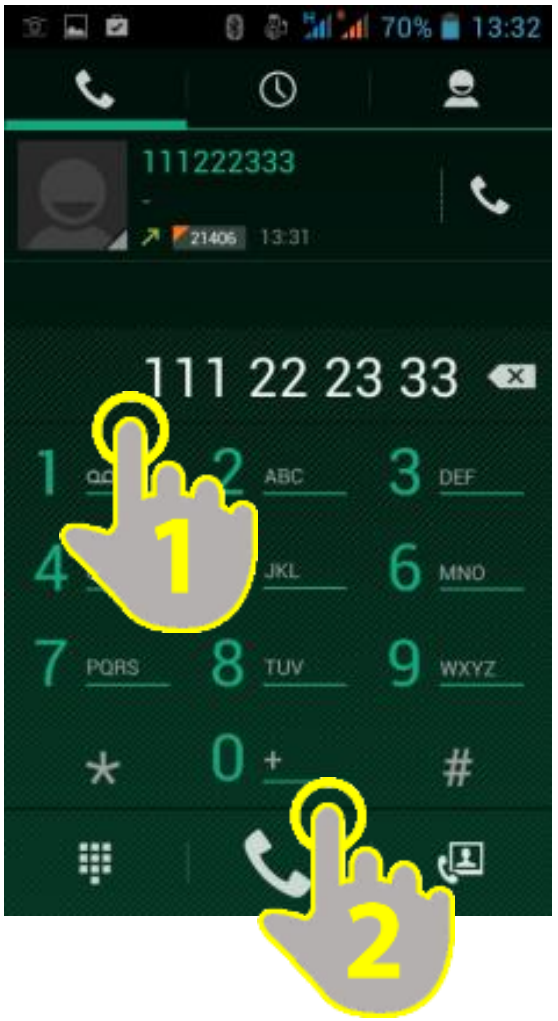

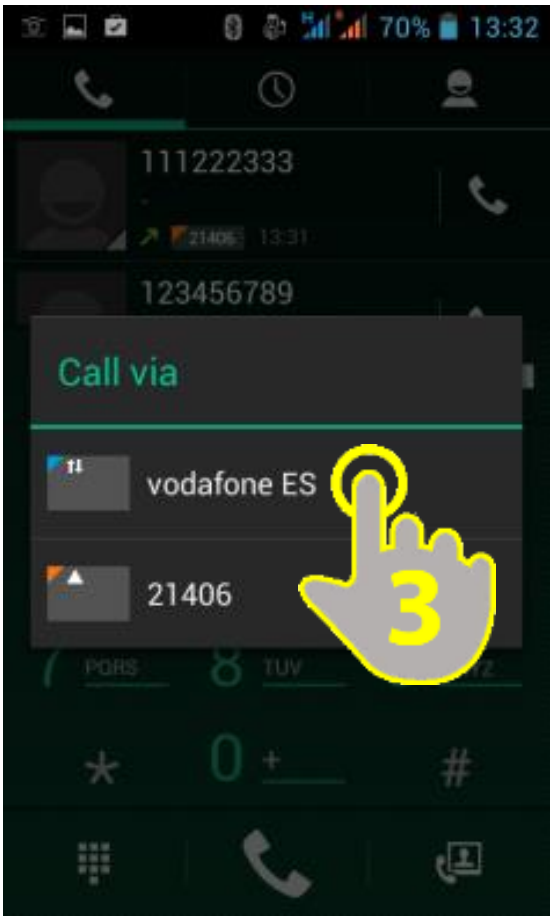

Calling from Your Contacts

1. Press **Home key >** tap **> People** and all the contacts which are recorded on your phone will appear. Each contact will have a colour besides them to indicate in which SIM they are stored. You may, however, dial a SIM 1 contact through SIM 2.
2. Slide your finger to scroll the contacts list and tap the contact name you want to call **(1),** when the contact details appear, click on the number **(2),** and choose the SIM card to dial from **(3)**

You can search for a contact by tapping the button at the bottom of the screen.

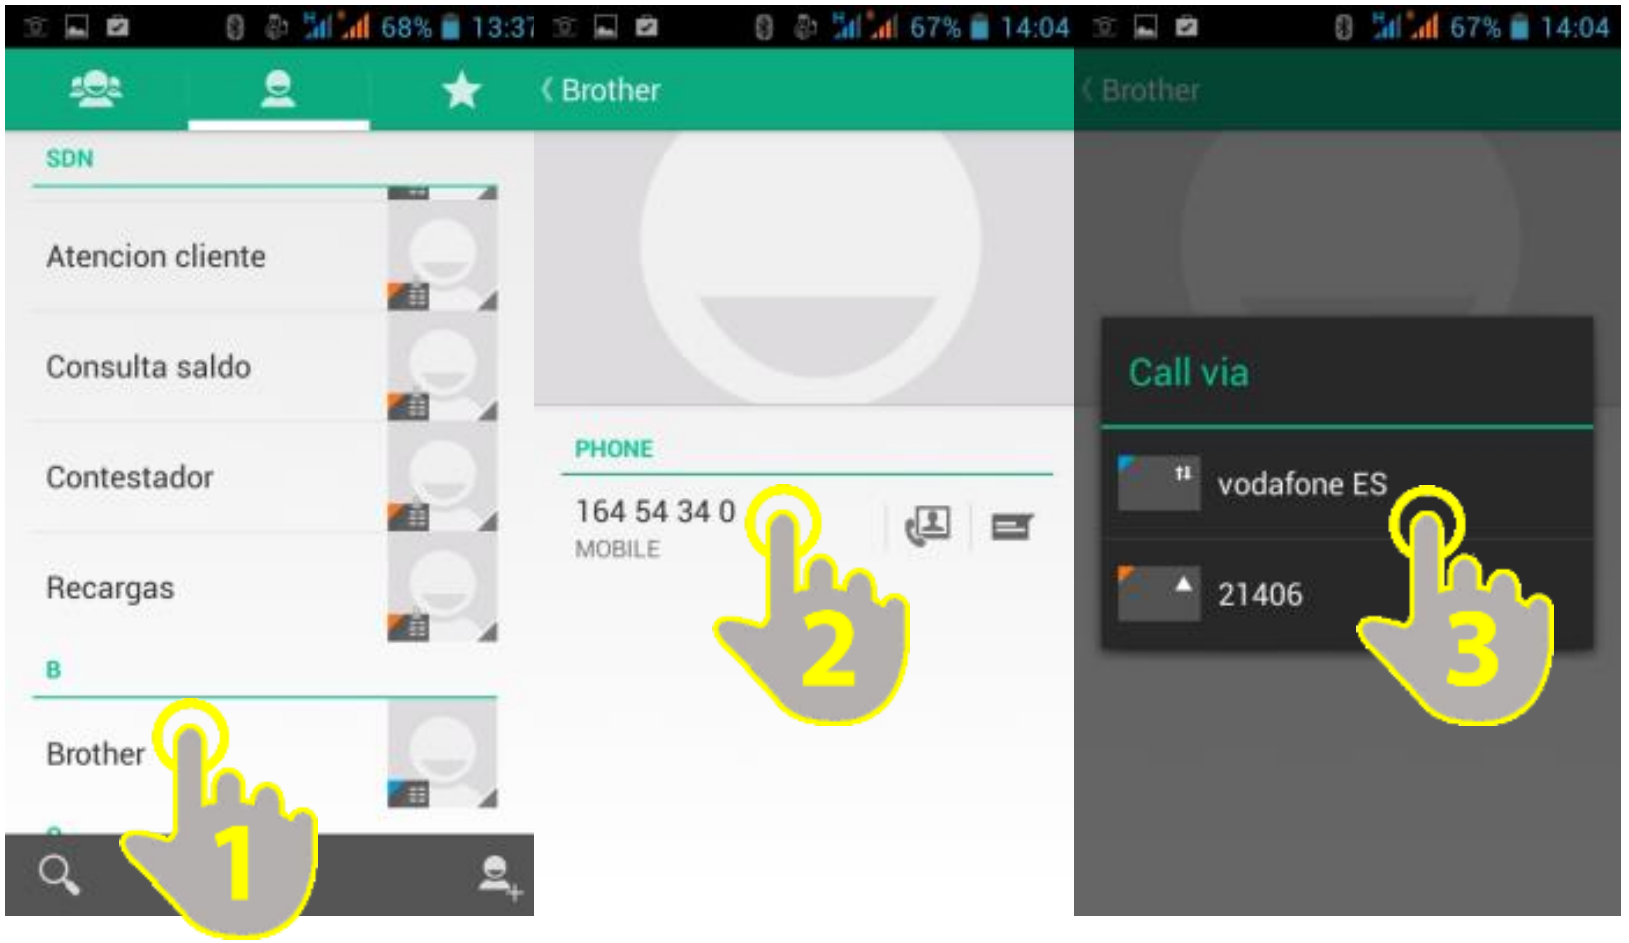

Calling from Your Call Log

1. If you have opened the dialer, touch the call log tab to open the call records. The options of “all, dialed, received, and missed calls” are available. Tap on the option desired and the display then shows a list of the corresponding call records.
2. Tap the dial icon on the right side of the current record and once again select from which SIM you would like to place this call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home key >** tap **> Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

Receiving Calls

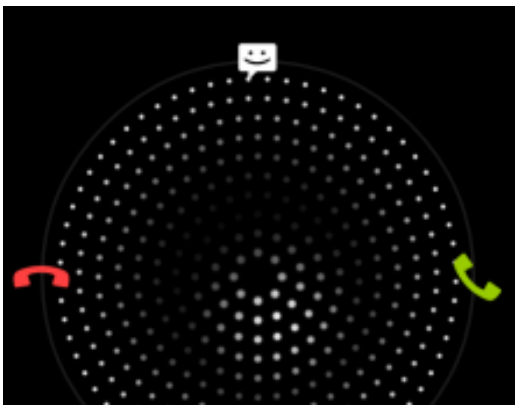

Answering a call

When there is an incoming call, the screen will show the contact name (if the number is stored in your contacts list) or otherwise just the number of the incoming call will show up.
Note: All the incoming calls will be saved to the call log.

To answer an incoming call, drag the white circle in the center of the screen towards the right to answer the call. (As shown in the picture above)

Rejecting a call

To reject an incoming call, drag the white circle in the center of the screen towards the left to reject the call. You may wish to drag the icon upwards towards the message icon to send a SMS to the person calling. You may choose one of the preset SMS's or compose your own SMS. (As shown in the picture above)

Muting the ringtone during an incoming call

In order to turn off the ringtone during an incoming call, simple press the volume down button once to mute the ringtone.

Muting the microphone during a call

When engaged in a phone call, you may wish to mute the microphone. At this moment, the other party will not be able to hear you while you may still hear them.

Tap to turn your microphone off. To turn your microphone back on, tap again.

Turning the Speakerphone On/Off

Tap during a call to turn the speakerphone on. Tap again to turn off the speakerphone.

Ending a Call

Tap to finish a call

CONTACTS

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key >** tap **> People**.

Creating a Contact

1. Tap from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

1. Tap in the bottom of the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed. If no contacts have been matched it means that either you have spelt it wrong or the contact does not exist.

See previous section “Creating a Contact” to input the details of a new contact.

MESSAGING

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu. Press the **Home Key >** **> Messaging** to access the Message inbox.

Messages folder

Instead of an inbox and outbox, your phone organizes all messages you send and receive into one box, where messages exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the entire conversation. The small number besides the message indicates how many messages exist in the thread.

Sending an Message

1. Press the **Home key >** tap **> Messaging**.
2. Tap to create a new message.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap to select recipients.
4. Tap **Type text message** and type your message.
   - Tap **Menu Key** to insert quick text or contact.
   - If you are sending an MMS, tap **Menu Key** to add a subject, or tap to attach pictures, videos, audio, or slideshow.
5. Tap to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them tap the **Menu Key > Settings** from the Messaging Screen.

> ***NOTE**: From SMS settings screen tap the **Menu Key > Restore default settings** to change the message settings back to the original.*

Touch Screen Input Settings

Choose the touch input settings by tapping the **Menu Key > System settings > Language & input** from Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings you desire.

CONNECTING TO THE INTERNET

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually.

Just press **Home key >** tap **> Settings > SIM management > Data connection**.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please **contact your provider** to get the necessary information.

You can view settings by pressing **Home key >** tap **> Settings > More > Mobile networks > Access Point Names**.

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key >** tap **> Settings**.
2. Click next to the Wi-Fi menu to turn it on, click once again to turn off the Wi-Fi function. **(1)**

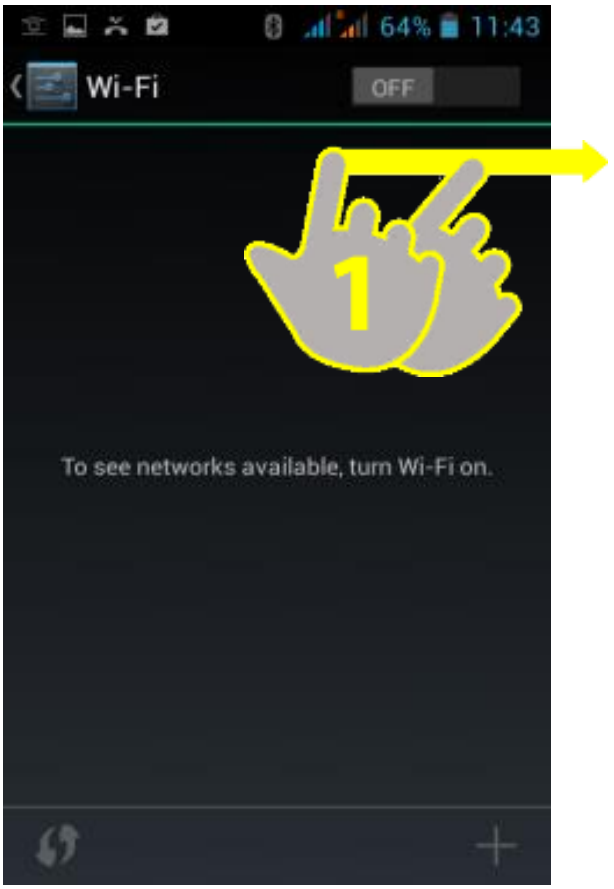

Connecting to a Wi-Fi Network

In order to browse the internet, you must first connect to a Wi-Fi network. To do this, simply follow the steps below:

1. Press the **Home key >** tap **> Settings > Wi-Fi.**

   When the Wi-Fi is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it. **(2)**

***NOTE**: If security features are implemented, you’ll need to enter a password in order to gain access to the network.*

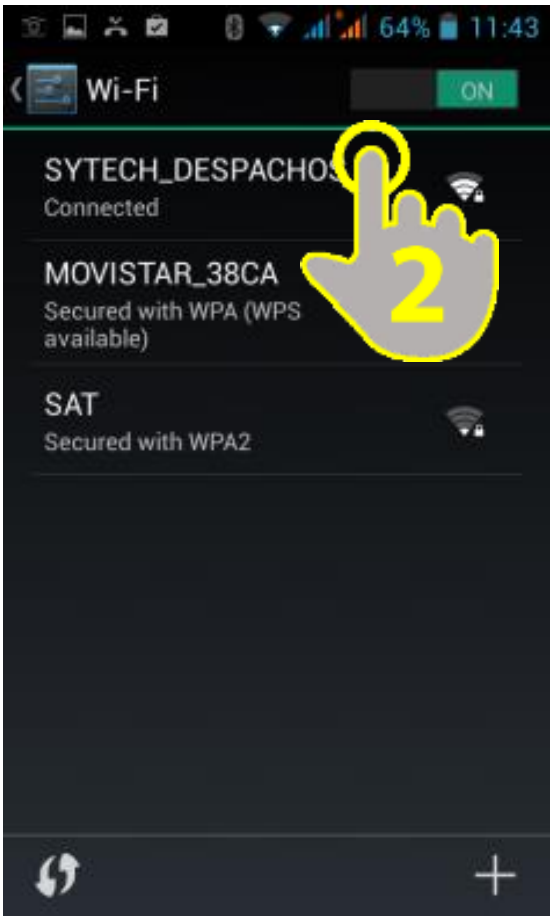

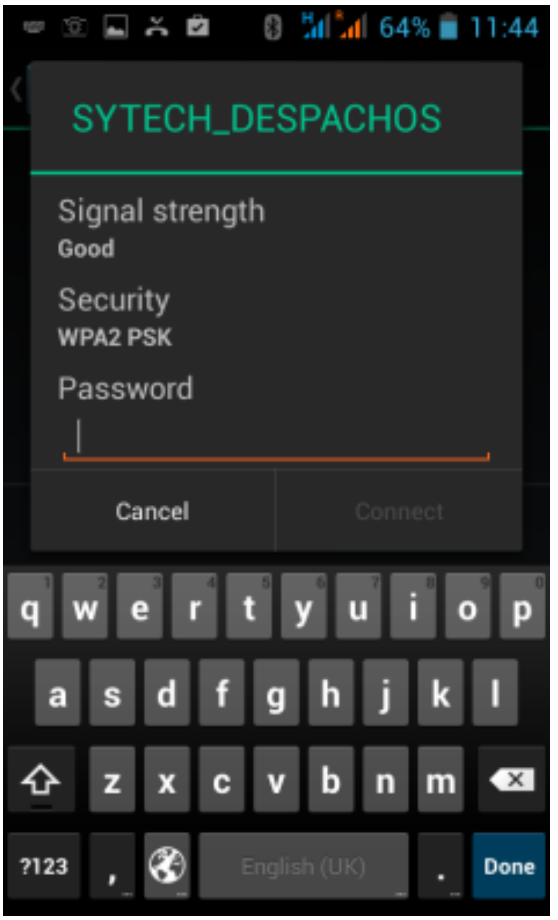

3. Once the password has been entered correctly the Wi-Fi connection is then established and it will save in the list of Wi-Fi networks. The next time this network is in range it will connect automatically.
4. If a new network is detected at any time it will be indicated.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the icon in the status bar. The bars in the icon indicate the strength of the signal. The more the bars the higher the signal strength. Always try to be in a place with good signal in order to avoid any unnecessary 3G data charge. (Consult your local provider for more information)

USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press the **Home Key >** tap **Menu Key > System settings > More > Tethering & portable hotspot** and tick the **USB tethering** check box.

Disabling USB tethering

Press **Home Key >** tap **Menu Key > System settings > More > Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

> ***NOTE**: When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.*

You can configure the Wi-Fi hotspot as follows:

1. Press **Home Key >** tap **Menu Key > System settings > More > Tethering & portable hotspot**, click next to the Wi-Fi hotspot to turn it on.
2. Tap **Wi-Fi hotspot** to set up & manage the portable Wi-Fi hotspot. Now you can find the hotspot on other devices and connect to it.

> ***NOTE**: When connecting to the Wi-Fi Hotspot, you may be asked to insert a password. Click on the Wi-Fi Hotspot and it will enter into the settings where you will be able to find all information.*

Disabling the Wi-Fi Hotspot

Press **Home Key >** tap **Menu Key > System settings > More > Tethering & portable hotspot** and click next to the Wi-Fi hotspot to turn it off.

BROWSING THE INTERNET

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press the **Home Key >** tap **> Browser**.

There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse. Then tap on the touch keyboard. **(1)**
- Tap **Menu Key > Bookmarks/History** and select a bookmark or history to open.

Browsing Options

When you browse the Web, you can also do the following:

- Press the **Menu Key > Refresh** to refresh the current page
- Press the **Menu Key > Home** to go back to the homepage
- Press the **Menu Key > Save to Bookmarks** to add a bookmark
- Press the **Menu Key > Close** and select **Quit** to exit.
- Press the **Menu Key > Save for offline Reading** to store the page to be able to read it without an internet connection
- Press the **Menu Key > Share page** to share the page via social media or email.
- Press the **Menu Key > Find on page** to find a particular item on a page
- Press the **Menu Key > Request desktop site** to view the page as if it were to be viewed on a desktop.
- Press the **Menu Key > Bookmarks/History** and select a bookmark or history to open.
- Press the **Menu Key > Settings** to configure browser settings.

Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu Key > Save to bookmarks**. Give the bookmark a name and save it.

Editing a Bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **OK** to save it.

Deleting a Bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.

BLUETOOTH

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key >** tap **> Settings.**
2. Click next to the Bluetooth menu to turn it on **(1)** When it is on, the icon will appear in the status bar.

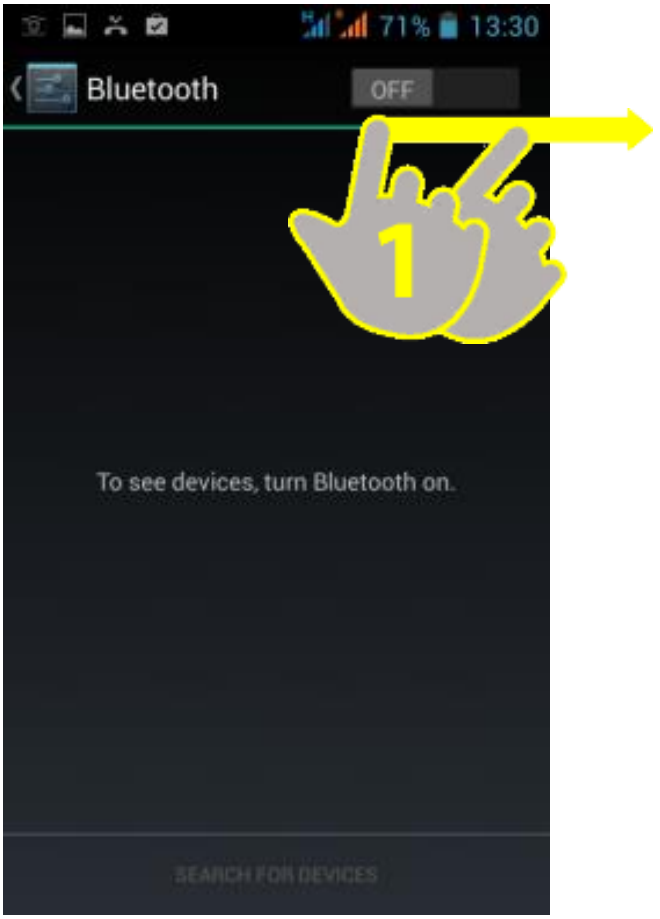

3. Tap on the **Bluetooth** function. Your phone will show all visible Bluetooth devices in range.
4. Tap the device you want to pair with **(2)** and operate according to the message which shows up on screen.

   When both devices to be paired accept the connection, the pairing process is completed and you may now transfer data.

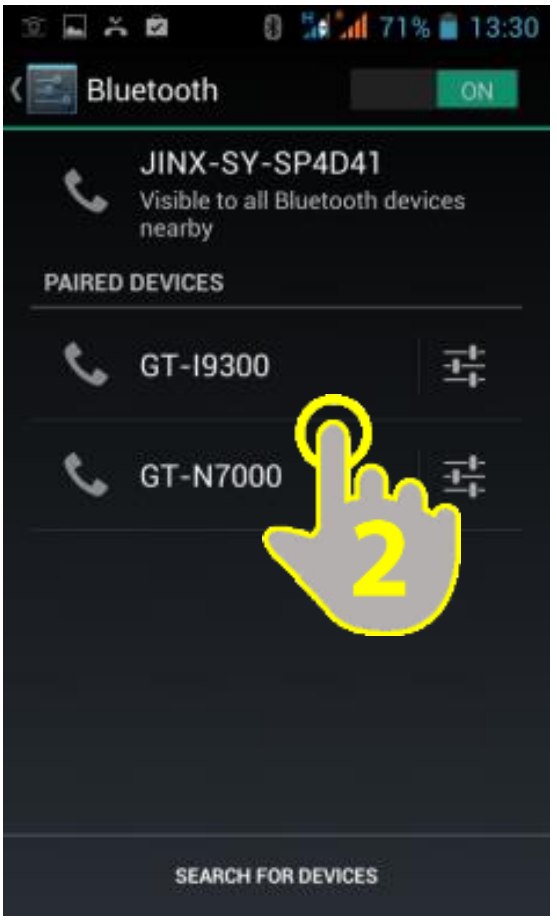

***NOTE**: Tap your device name to make your phone discoverable if other devices try to pair with your phone.*

***NOTE**: All content which is shared is stored in its respective folder. E.g. a picture will be stored in the image gallery.*

When searching for Bluetooth devices, or connecting to previously paired devices, press the **Menu Key** to rename the device, set the visibility timeout and show the files received.

MULTIMEDIA

Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home Key >** tap **> Camera**.

Tap to take a picture. To view it, just tap the picture in the right corner of the screen.

You may shift to video mode by pressing e Video camera icon. When you press it the recording commences instantly. To Stop and save the recording, simply press on the Video camera icon once again.

Choose from different capture modes on top of the camera screen to select the desired one. You may choose from Auto Capture when Smile is detected, Panorama mode HDR mode and normal mode.

All images and videos captured with the camera application are saved to the image gallery.

To modify the settings of the camera, press the menu button.

Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the

radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

- To tune in, plug your headset into your phone. Press **Home key >** tap **> FM Radio.**

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

1. Press **Home Key >**tap **> Music** to open the Music Screen.
2. Click the Music category label on top of the screen (Albums, Artists, etc.) and then select any music files to start the music playback
3. Adjust the volume with **Volume Keys**.
4. Press the icon to view in playlist mode.
5. Press the icon to enter into Shuffle mode
6. Press the icon once to repeat all songs, twice to repeat the current song and one more time to turn repeat mode off.
7. Press the **Menu Key** to view the different options:
    - Party Shuffle
    - Add to playlist
    - Use as ringtone

- Delete
- Sound effects
- Library

Opening Your Gallery

Press **Home Key >** tap **> Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

Playing Your Videos

Press **Home Key >** tap **>Video Player.** You can use Video Player to play videos on the phone and memory card.

Select the video you would like to play and the phone will ask you to complete the acting using which application. Select the desired application and confirm with “Always” or “Just Once”

When the playback has begun, you may flip the phone horizontally to view it in landscape mode.

Press the **Menu Key** to select “Stop” or “Loop”

Creating Voice Memos

Sound Recorder enables you to record your voice memos.

1. Press **Home Key >** tap **> Sound Recorder**.

2. Tap to start recording.
3. Tap to stop recording.
4. Tap to play back the voice recording.
5. Save the voice recording after you have stopped it, or tap **Discard** to delete the recording.
6. Tap the icon to view all the saved recordings.

PHONE SETTINGS

Setting Date and Time

1. Press **Home key >** tap **> Settings > Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

Display Settings

Press **Home key >** tap **> Settings > Display**, you can adjust the display settings as you like:

- **Lock Screen Notifications**: Tick the box to be able to view notifications when the phone is in lock mode.
- **Theme**: Select the colour theme for the phone
- **Wallpaper**: Select the wallpaper you wish to use

- **Auto-rotate screen**: Rotate the screen display as you rotate the phone. Tick or Untick the box as you wish.
- **Brightness**: Adjust brightness of the screen
- **DayDream**: Select what should appear when the phone is idle
- **Font Size**: Select the font size for the phone
- **Sleep**: Set the delay for the screen to automatically turn off.

Audio Profiles Settings

By pressing **Home Key >** tap **> Settings > Audio profiles**. Here you can choose from the following options:

- General
- Silent
- Meeting
- Outdoor

When selecting General mode, you can adjust various settings by pressing on the icon

Language Settings

You can change the language of your phone system in two simple steps.

1. Press **Home key >** tap **> Settings > Language & input > Language**. In this option you may select the

following:

- Select a language from the list which is available.
- Select to activate or deactivate the spellchecker
- Set the keyboard and input methods
- Configure the speech settings
- Configure mouse/Track pad settings

Disabling Data Services

Press **Home key >** tap **> Settings > SIM management > Data connection**, then tap **Off**.

Switching Network Modes

1. Press **Home key** > tap > **Settings > More > Mobile networks > Network Mode**.
2. Select one of the following: GSM/WCDMA (auto mode), WCDMA only, and GSM only.

Switching Networks

1. Press **Home key>** tap **> Settings > More > Mobile networks > Network operators**.
2. Tap the SIM card you want to set.
3. Tap **Select manually** to register manually, or tap **Choose automatically**.
4. Once the list of new networks appears, you may connect to them by selecting on the desired one. However some may

appear as “forbidden” which means you cannot connect to that particular network.

5. If you decide not to choose any other network, you must activate the data connection once again as it turns off automatically when manually searching for another network

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please **contact the service provider** to find out more.

Press **Home key>** tap **> Settings > More > Mobile networks > Access Point Names**.

Once inside the Access Point Names settings, you may modify them as told by your service provider.

***NOTE**: Do not modify the APN settings without having consulted your **service provider** previously. The misuse of this function could cause the data connection to stop working completely.*

Security Settings

Here’s how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern

1. Press **Home key >** tap **> Settings > Security >Screen lock > Pattern**.

2. Drag your finger to connect at least four dots, and draw the desired pattern.

3. Touch **Continue**.

4. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

1. Press the **Power Key** to wake up the screen.
2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

Protecting Your Phone with a Voice unlock

1. Press **Home key >** tap **> Settings > Security > Screen lock**.
2. Tap **Voice Unlock**.
3. Follow the on screen instructions to set the Unlock command and Wake up commands.

Unlocking the Screen with Your Voice unlock

1. Press the **Power Key** to wake up the phone.
2. Speak your unlock command and the phone will get unlocked.

Creating a PIN or Password

1. Press **Home key >** tap **> Settings > Security > Screen lock**.
2. Tap **PIN** or **Password**.
3. Follow the on screen instructions to complete your PIN or password settings.

Unlocking the Screen with Your PIN or Password

1. Press the **Power Key** to wake up the phone.
2. Enter the PIN or password you set to unlock the screen.

Disabling the Screen Unlock Security.

If you have created an unlock pattern, PIN or password, you can disable it by the following method:

1. Press **Home key >** tap **> Settings > Security > Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created if required.
3. Tap **None**.
4. The screen unlock security is now disabled.

Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by

your mobile phone carrier. It's best to lock your SIM card as soon as you can.

1. Press **Home key >** tap **> Settings > Security > Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Tick the **Lock SIM card** check box.
4. Enter the PIN you've been given and tap **OK**.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key >** tap **> Settings > Security > Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Make sure you already have ticked the **Lock SIM card** check box.
4. Tap **Change SIM PIN** and enter the new **PIN.**

Managing Your Device Memory

Press **Home Key >** tap **> Settings > Storage.**

You can view the space information of the SD card and the phone storage.

- **Unmount SD card**: You can unmount the SD card to safely remove it.
- **Erase SD card**: Erase all data on the SD card.

Privacy: Reset to Factory Settings

Press **Home key >** tap **> Settings > Backup & reset > Factory data reset > Reset phone > Erase everything.**

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

Applications

Press **Home Key > tap** **> Settings > Apps.**

Installing an Application

You can install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key >** tap **> File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the

application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application

1. Press **Home key >** tap **> Settings > Apps**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

1. Press **Home key >** tap **> Settings > Apps**.
2. Click the application you want to move on the **Downloaded** tab.

Managing Other Settings

Text-to-speech Output

You can set the text-to-speech and voice recognition options by pressing **Home Key >** tap **> Settings >Language & input > Text-to-speech output.**

Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key >** tap **> Settings > Accessibility**.

OTHER APPLICATIONS

Clock

Press **Home key** > tap > **Clock**, you can view the clock or set the alarm.

On the top of the screen there are 3 icons available. Choose between Countdown timer, Clock or Chronometer.

Calculator

You can use the phone directly to perform simple mathematical calculations.

1. Press **Home Key >** Tap **> Calculator**.
2. Click the buttons on the calculator display to perform basic calculations.

TIPS: Tap **Menu Key > Advanced panel** to use the scientific calculation function.

SPECIFICATIONS

Screen: 5” IPS, G+G, QHD (960x540)
CPU Quad Core Cortex A7 1.3Ghz
GPU: Mali 400
Internal Memory: 8GB
External memory extendible up to 32GB
RAM memory: 1GB
Lithium Ion Battery: 3,7V/2000mAh
Rear Camera: 8.0MP real with flash (13MP interpolated)
Front Camera: 2MP real (5MP Interpolated)
Dual SIM slot: (GSM / WCDMA)
Supported Bands: GSM. 850-900-1800-1900Mhz
WCDMA: 900 y 2100Mhz

Connectivity:
Wi-Fi 802.11 b/g/n
Micro USB
Earphone connection 3.5mm
Bluetooth V3.0
3G (WCDMA), 2G (GSM)
GPS and A-GPS

Operating System:
Android 4.2.2 Jelly Bean

Technical Specifications:
Dimensions: 145 x 74 x 10mm
Weight: 178g (Battery Included)

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Smart Phone
Sytech® SY-SP5Q81 ABYSS complies with the following directives:

ROHS Standard: 2011/65/EC
R&TTE: Directive 1999/5/EC

EN 62311:2008
EN50360:2001 + AC:2006 + A1:2012
EN62479:2010
EN60950-1:2006 +A11:2009 + A1:2010 + A12:2011
ETSI EN301 489-1 V1.9.2 (2011-09)
ETSI EN301 489-3 V1.4.1 (2002-08)
ETSI EN301 489-7 V1.3.1 (2005-11)
ETSI EN301 489-17 V2.2.1 (2012-09)
ETSI EN301 489-24 V1.5.1 (2010-10)
ETSI EN300 328 V1.7.1 (2006-10)
ETSI EN300 440-2 V1.4.1 (2010-08)
ETSI EN301 511 V9.0.2 (2003-03)
EN 301 908-1 V5.2.1 (2011-05)
EN 301 908-2 V5.2.1 (2011-07)

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator